

DRY ICE

Remove Cryogen Cap



1

Fill with Dry Ice Pellets (Both Sides)



2



Replace Cryogen Cap



3

LIQUID NITROGEN

Remove Cryogen Cap




1

Remove Dry Ice Insert



2

Add Liquid Nitrogen

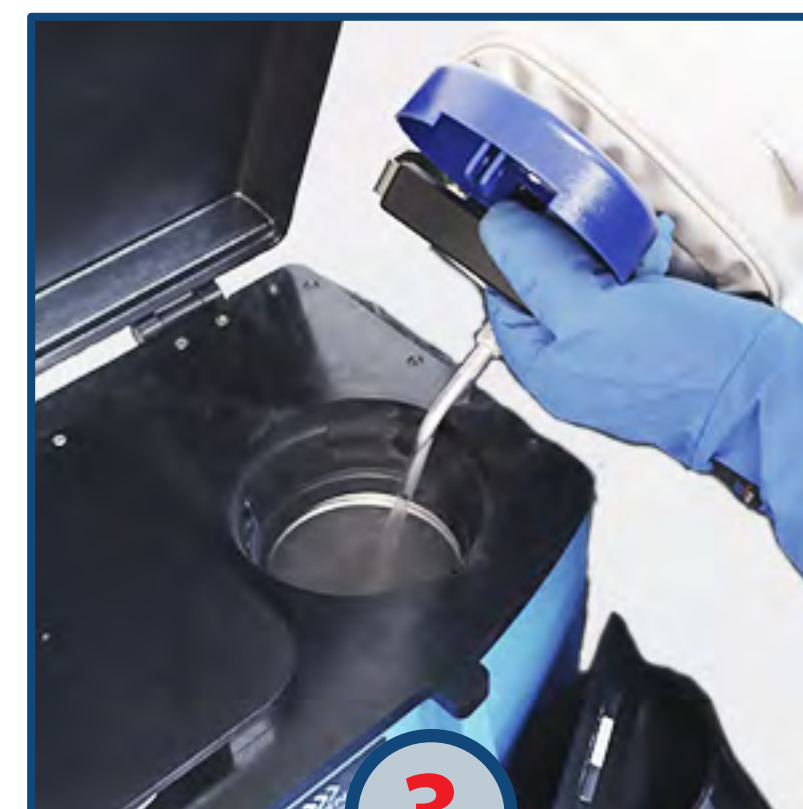

3

Replace Cryogen Cap



4